

SECTION I

GENERAL SAFETY FOR THE COMPACKER

1. STOPPING THE COMPACKER IN AN EMERGENCY

There are four **EMERGENCY STOP PUSHBUTTONS** located around the Compacker (*fig. 1-1*). Each one will immediately stop every part of the Compacker. They are only to be used in an emergency.



figure 1-1: An emergency stop pushbutton.

They are located:

- a. On the **LEFT SIDE** of the Compacker.

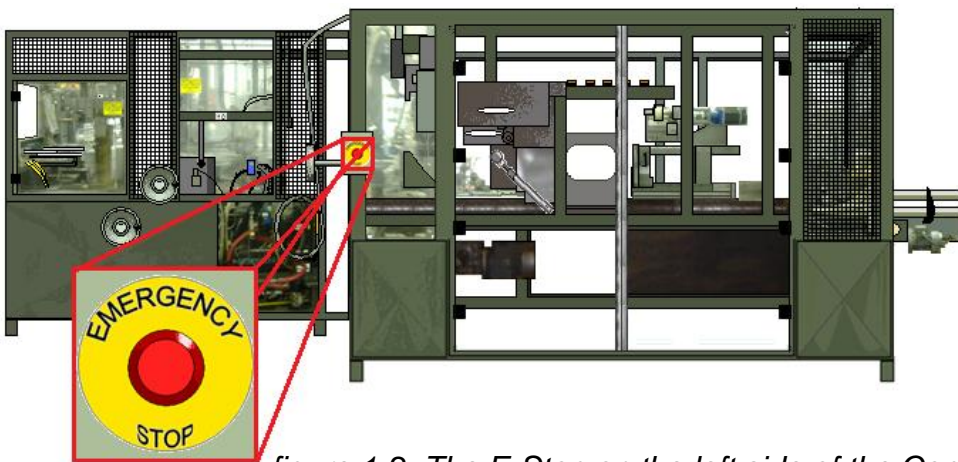


figure 1-2: The E-Stop on the left side of the Compacker.

- b. On the **ALLEN BRADLEY PANEL** on the **RIGHT SIDE** of the Compacker (fig. 1-3).

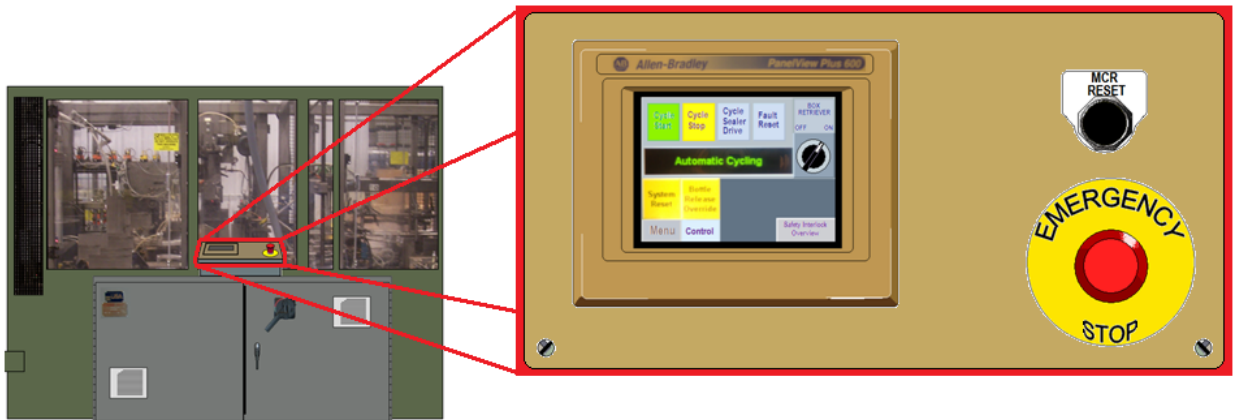


fig. 1-3: The location of the Allen Bradley E-Stop button.

- c. Around the **FIRST CORNER DOWNSTREAM** from the Compacker (fig. 1-4).

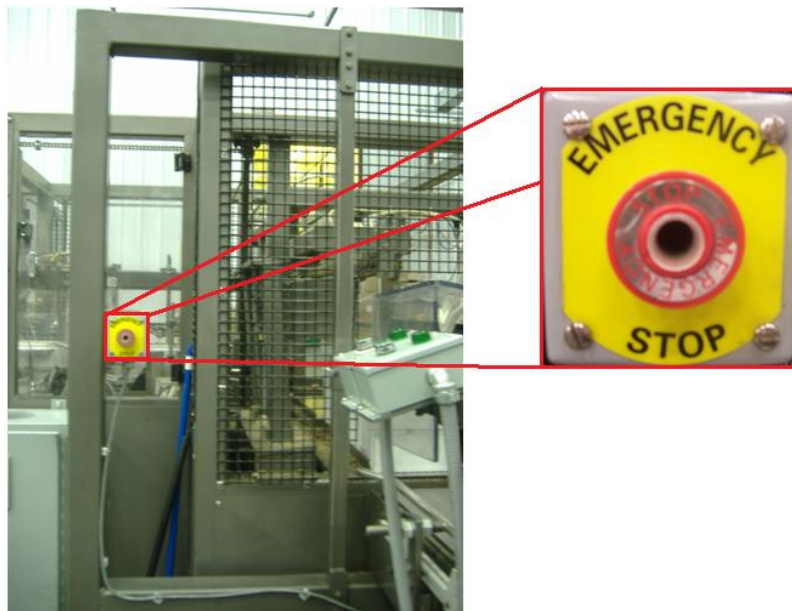


figure 1-4: The first E-Stop button downstream from the Compacker.